

◎5馬力(YC125M-A・B)

V200

実施ガス種										作 業 手 順	作業箇所及び注意事項
項 目	LPG ↓ 13A 12A	6C ↓ 13A 12A	13A ↓ LPG	6C ↓ LPG	13A ↓ 6C	LPG ↓ 6C	7A ↓ 13A 12A	6A ↓ 13A 12A	5A.5B 5C.7C ↓ 13A 12A		
外	○	○	○	○	○	○	○	○	○	※項目外及び1～6はYGC1124(V100)と同様の作業手順と なります。	
1	○	○	○	○	○	○	○	○	○		
2	×	○	×	○	○	○	×	○	○		
3	×	×	×	×	○	○	×	×	×		
4	○	×	○	○	×	○	○	×	×		
項 目	13A ↓ 12A	12A ↓ 13A	LPG ↓ 7A	7A ↓ LPG	6C ↓ 6A	6A ↓ 6C					
1	○	○	○	○	○	○					
項 目	6B.6C ↓ 5A.5B 5C.7C		5A.5B 5C.7C ↓ 6B.6C								
1	○		○								

点火時期設定

製品型式	製造型式	ガス種	点火時期
YC125MA	M961	13A 6C	12°
YC125MAL			
YC125MEA	M971		
YC125MEAL			
YC125MNA	M981		
YC125MNAL			
YC125MB	M962		
YC125MBL			
YC125MBOS	M964		
YC125MEB	M972		
YC125MEBL			
YC125MNB	M982		
YC125MNBL			
YC125MBP	M962	LPG	10°
YC125MEBP	M972		
YC125MNBP	M982		
YC125MAP	M961		18°
YC125MEAP	M971		
YC125MNAP	M981		

■ 設定条件：

E/G回転数を1000rpmに固定し
点火時期を調整する。

■ V200 5HP系